

GRIMMEN
HARMONY WITH FUTURE


SANDWICH MAKER

GR-SW191



GET TO KNOW YOUR APPLIANCE

GR-SW191

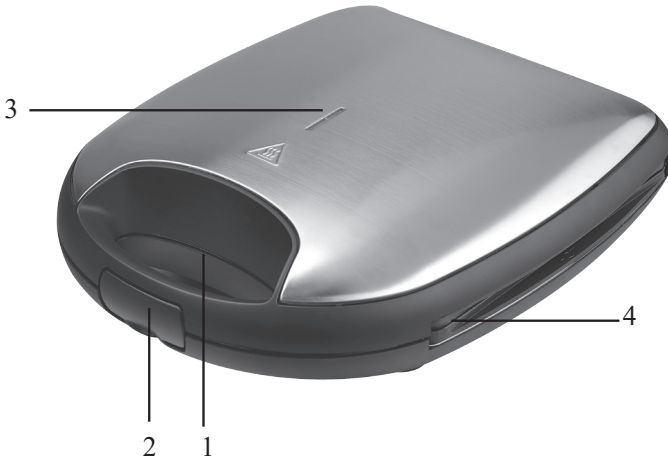

PARTS

1. Handle
2. Lock
3. Power indicator
4. plate


Removal And Placement Of Plates

REMOVAL

- Unplug the electric lead and let the appliance cool off completely before removing plates
- Open your Family Croque toasted sandwich maker using the handle.
- Push the two grill plate clip-locks (6) of the lower plate towards you, one after the other, to remove the plate.
- As soon as you disconnect the second lock, the plate will unclip. Push the lock of the upper plate away from you to release it. Then remove the plates from the appliance.

PLACEMENT

- Open the appliance.
- At the bottom of both grill plates there are two ridges that fit into the notches of the appliance. Fit the ridges of the grill plate into the notches.
- Push the baking plate into place with your two thumbs and then clip to lock. The lock will keep them in place when they are installed correctly.
- Do the same for the second grill plate and make sure both are properly installed by closing your Family Croque carefully.

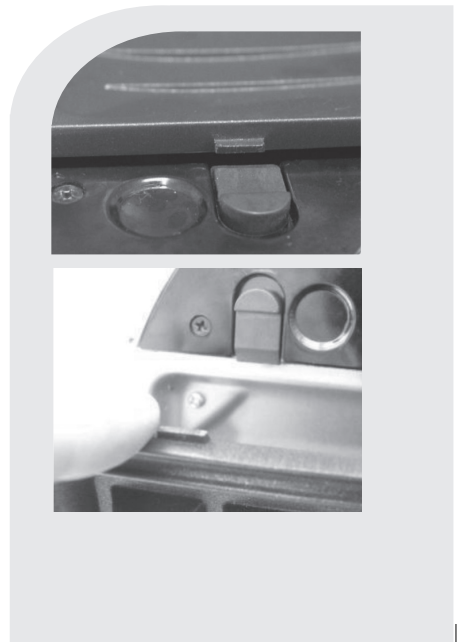

THIS APPLIANCE IS ONLY FOR HOUSEHOLD USE OR ENVIRONMENTS OF A SIMILAR CHARACTER SUCH AS :

- Kitchens that are used by personnel of shops, office or other similar professional environments.
- Farms
- Hotel rooms and motel rooms and other similar environments with a residential character.
- Bed and breakfast or similar.

Attention :

This appliance may not be used with an external timer or separate remote control.

This device is not for use by persons, including children, with any kind of impairment, such as, physical, sensorial or mental incapacity. These persons are also not permitted to use the device if they have limited experience or insufficient knowledge, unless they have received the necessary instructions for use or are otherwise being supervised by people ensuring their safety. Make sure that children cannot play with the device.



- Never use the appliance with wet hands.
- Place the appliance on a dry level surface and provide an appropriate insulating mat.
- Ensure adequate ventilation on all sides of the appliance. Never use it near flammable materials or hot ovens.
- Always unplug from electric socket when cleaning the appliance or changing the plates. Allow the appliance in that case to cool off thoroughly.
- Regularly check for damage to the electric lead. Never allow the lead to hang over the edge of the table or contact hot surfaces.
- Use the appliance indoors only.
- Use the appliance only for its intended purpose.
- Do not touch hot surfaces; it is best to use oven gloves



GRIMMEN



www.grimmenhome.com



GR-SW191