

GRIMMEN
HARMONY WITH FUTURE

AIR PURIFIER FAN



GR-AP700

CONTENTS

SAFETY INSTRUCTIONS	1 - 2
SPECIFICATION	2
GETTING TO KNOW YOUR AIR PURIFIER	3
GETTING STARTED	4
APP SETUP	5 - 7
SMART LIFE APP TROUBLESHOOTING	7 - 8
REMOTE CONTROL	9
CONTROL AND DISPLAY	10-13
HOW TO USE AROMATHERAPY FUNCTION	14
CLEANING OF COMPLETE MACHINE	14
REMOVAL AND CLEANING OF CIRCULATING FAN	14 - 15
DISASSEMBLY AND CLEANING OF SCREEN	15 - 16
TRUBLESHOOTING	16-17
WARRANTY	17

SAFETY INSTRUCTIONS

Important:

Please read and comply with all of the instructions and warnings provided in this manual before using the product. Failure to comply with the instructions and warnings provided herein may result in inaccurate results or damage to the product itself.

01. Ensure the plug fits properly into a polarized power outlet.
02. This appliance should only be used in room with temperatures between 5°C and 35°C.
03. To avoid fire or shock hazard, connect the purifier into correct electrical outlet.
04. NEVER place on a soft surface such as a bed or sofa as this could cause the unit to tip over and the air inlet or outlet grills to be blocked.
05. Do not place anything on top of unit.
06. Do not move or tilt the unit while it is in operation.
07. Do not insert fingers or objects into the air inlet and air outlet.
08. Do not use outdoors. This unit is only suitable for indoor use, please avoid strong sunlight and rain.
09. Do not use near water to avoid electrical hazards.
10. Do not use the unit in wet or humid environments.
11. Do not handle the unit with wet hands. Thoroughly dry your hands before handling any part of the air purifier.
12. Do not place the unit directly below an air conditioner to prevent any moisture from getting in to the purifier.
13. Do not allow children, pet to play on or near the unit. Close supervision is necessary when any appliance is used by or near children, or disabled persons.
14. Keep unit away from heated surfaces and naked flames such as stove tops, ovens, radiators or computers.
15. Always turn the purifier off before unplugging it.
16. Always unplug the air purifier before moving or cleaning the unit, opening the rear cover, changing the filter and whenever the unit is not in use.
17. To disconnect the unit, be sure to pull the plug instead of the cord.
18. This unit does not remove carbon monoxide or radon. It can not be used as a safety device to prevent or clean up accidents with combustion processes and hazardous chemicals.

SAFETY INSTRUCTIONS

19. NEVER use detergents, gasoline, glass purifier, furniture polish, paint thinner, or other household solvents to clean any part of the purifier.
20. Non-professional personnel or unauthorized repair personnel shall not repair or transform the machine by themselves.
21. Do not operate the appliance with a damaged cord or plug. If the motor fan fails to operate or the unit has been dropped or damaged in any manner, contact the customer service.
22. Always allow 15 inches of clearance on all sides of the purifier.
23. This product complies with the maximum allowable concentration of ozone of 0.050 parts per million by volume (ppmv) in a 24-h period.
24. This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.
25. Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
26. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
27. Risk of fire. Do not replace attachment plug. Contains a safety device (fuse, AFCI, LCDI) that should not be removed. Discard product if the attachment plug is damaged.
28. The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.

Children being supervised not to play with the appliance.

Warn the user to unplug or disconnect the appliance from the power supply before servicing.

- a) Include instructions pertaining to a risk of fire, electric shock, or injury to persons, for cleaning and user-maintenance, such as lubrication; and
- b) Warn the user to unplug or disconnect the appliance from the power supply before servicing.

To Reduce The Risk Of Fire, Electric Shock Or Injury To Persons, Do Not Use


Replacement Parts That Have Not Been Recommended By The Manufacturer (e.g. Parts Made At Home Using A 3D Printer).

Warning: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

SPECIFICATION

Name : Smart Purifying Fan	Rated Frequency : 50-60Hz
Rated Voltage : 220-240V~	Rated Power : 53W
Product Model: GR-AP700	

GETTING TO KNOW YOUR AIR PURIFIER

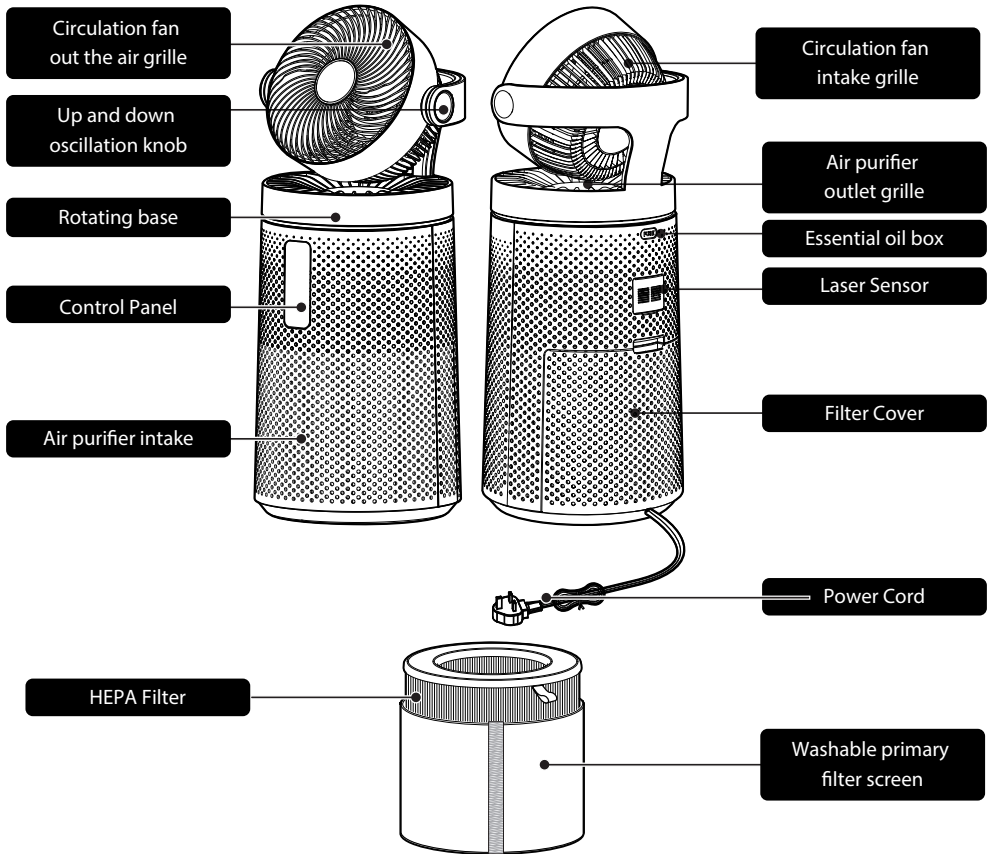

PACKAGE CONTENTS




1 X
Smart Purifying fan



1 X
User Manual



1 X
Remote control




1 X
Original essential oil
pads (Complimentary
5 pads)



1 X
True HEPA
Original Filter
(Pre-Installed)




1 X
Washable
primary filter
screen



3 X
Circulating fan
replacement
screw


GETTING STARTED

1

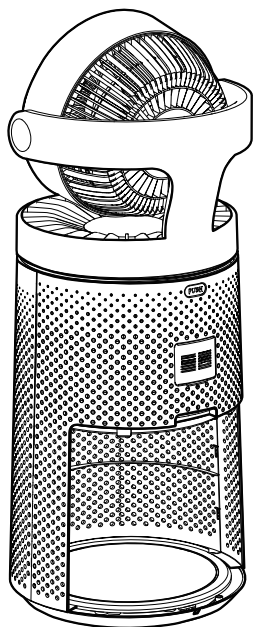


Your air purifier comes with an original filter included. Before use, do remember to remove the packaging from the filter.


1. Place the air purifier on a flat, stable surface like the floor. Open and remove the air intake grille on the back of the machine. (See picture 1)
2. Tear open the filter bag and remove the HEPA filters. (See picture 2)
3. Find the water wash strainer in the packing box and assemble it according to this figure (See picture 3)
4. Combine the filters and insert them into the machine. Close the grill to use. (See picture 4)

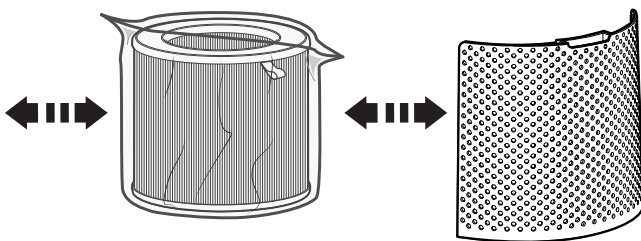



2

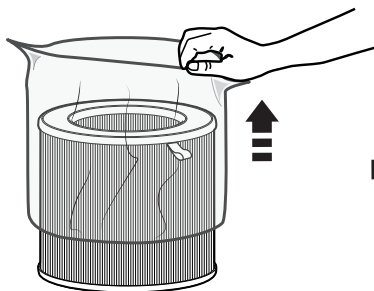

3

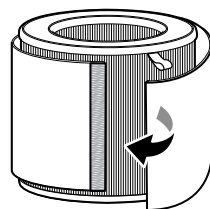

4

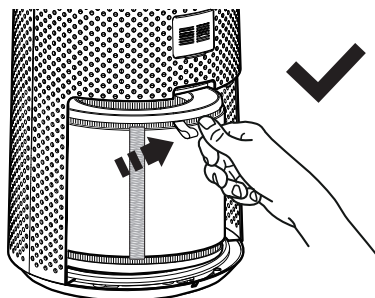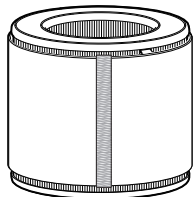

NOTE:



Ensure that the True HEPA filter (the side with the ribbon handle) is facing outward when installing the filter.



APP SETUP

1. Download Smart Life APP




To download the Smart Life Smart app, scan the QR code or search “Smart Life” in the Apple App Store® or Google Play Store.

2. Open the Smart Life Smart app. Log In or Sign Up.

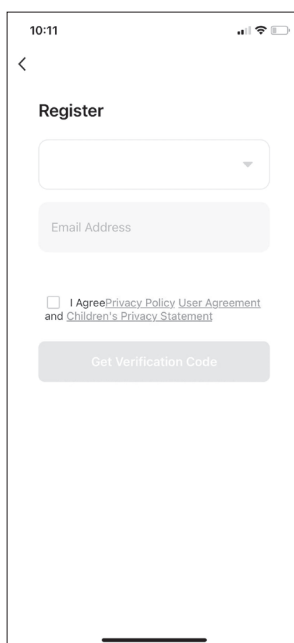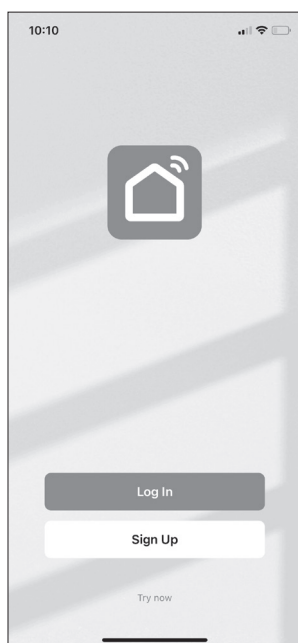

(Sign Up)

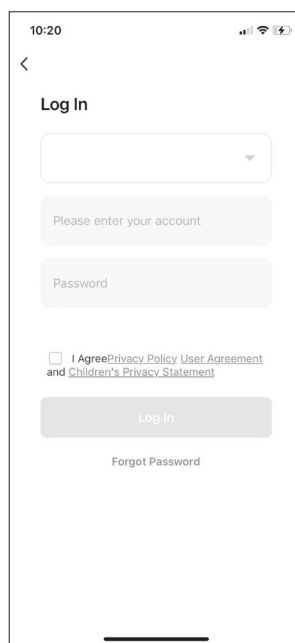

(Log In)

3. Ensure that the phone is connected to Wi-Fi, open the APP interface, and enable the Wi-Fi pairing function of the product at the same time (please refer to page 6 for product Wi-Fi pairing). Follow the following steps for product pairing.

APP SETUP

Step 1:




click "+" to Add Device

Step 2:

Manual Add Device, click
"Air Purifier(Wi-Fi)"

Step 3:

Enter your Wi-Fi password
and click "Next"

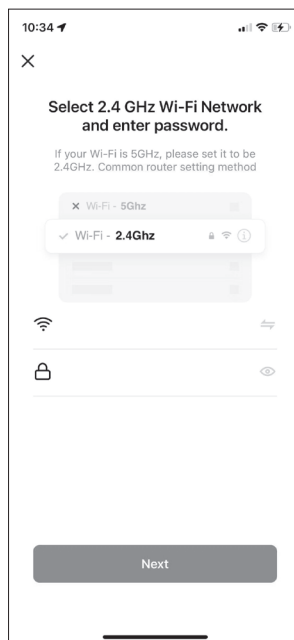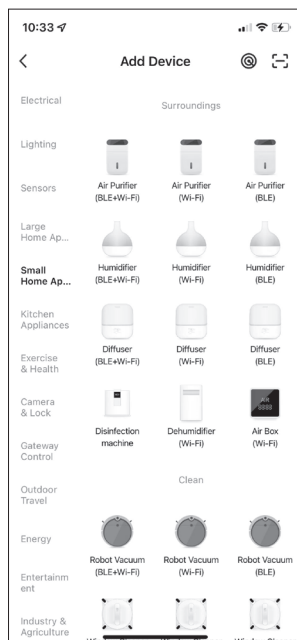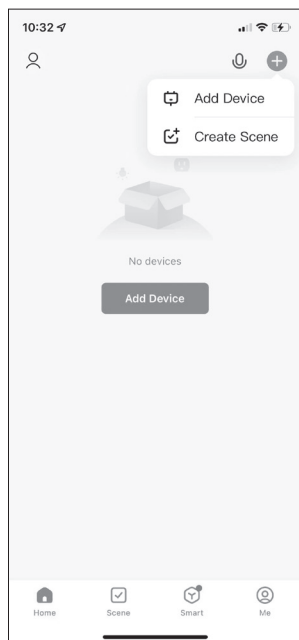

SETUP TIPS:

Use this button to put your unit into Discovery Mode. Press and hold the Wi-Fi button for 3 seconds until the Wi-Fi symbol starts to flash.

WI-FI INSTRUCTIONS

1. Ensure that you are connected to a secure 2.4GHz Wi-Fi network during setup. Do not use a 5GHz network as it will not pair successfully.
2. Complete pairing within 3 minutes. If the network distribution fails within this time, the Wi-Fi indicator light will go out. To restart, press and hold the Wi-Fi button for 3 seconds.
3. While connected to Wi-Fi, press and hold the Wi-Fi button for 3 seconds to reset the Wi-Fi connection. At this point, the device will enter pairing mode and need to be re-paired.
4. In pairing mode, after a power outage, the Wi-Fi pairing mode is disabled. To re-enter pairing mode, press the WIFI button for 3 seconds. The Wi-Fi indicator light will turn on again.

APP SETUP

Step 4:




To confirm that the product is powered on, please follow the operation instructions, and long press “” to enable Wi-Fi matching, and ensure that the Wi-Fi indicator blinks. (Choose the Blink Slowly)

Step 5:

Open the search product, enter the matching moment

Step 6:

The pairing is successful, and the operation mode of the smart APP is enabled

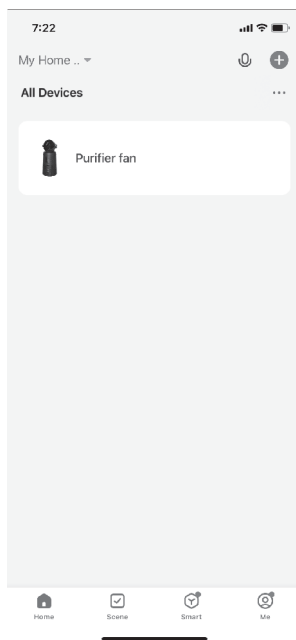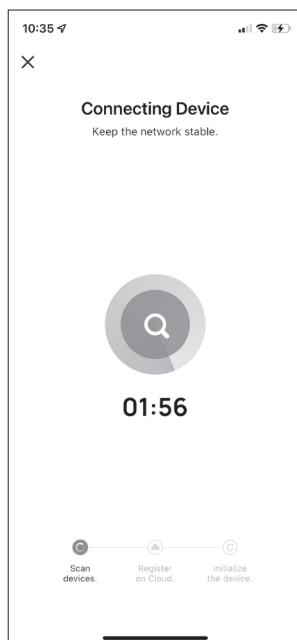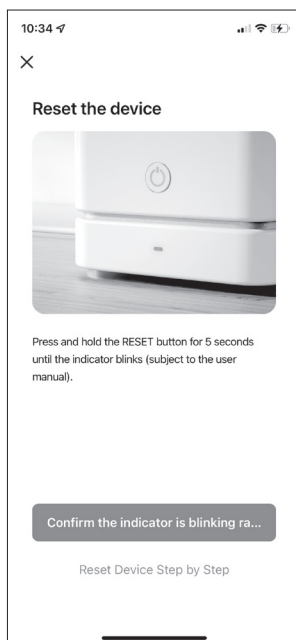

SMART LIFE APP TROUBLESHOOTING

My smart air purifier isn't connecting to the Smart Life app.

1. During the setup process, you must be on a secure 2.4GHz Wi-Fi network. (Please do not use the 5G network, otherwise, the pairing cannot be successful.)
2. Confirm that the network is working correctly.
3. Make sure the Wi-Fi password you entered is correct.

TIPS :

- ① There should be no spaces at the beginning or end of the password.
- ② Test the password by connecting a different electronic device to the router.
- ③ If you're manually typing in the SSID and password, double check that both are entered correctly.

SMART LIFE APP TROUBLESHOOTING

4. Try moving your air purifier closer to the router. Your phone should be as close as possible to your air purifier.
5. Your router may need to be at a higher location, away from obstructions.
6. Make sure your air purifier and router are away from appliances (such as microwave ovens, refrigerators, electronic devices, etc.) to avoid signal interference.
7. If you're using a VPN, make sure it's turned off while setting up your air purifier.
8. Disable portal authentication for your Wi-Fi network.

NOTE:

If portal authentication is enabled, the air purifier will not be able to access your Wi-Fi network, and setup will fail.



My air purifier is offline.

1. Make sure the air purifier is plugged in and has power, then refresh the Smart Life menu by swiping down on the screen.
2. Make sure your router is connected to the internet and your phone's network connection is working.
3. Delete the offline air purifier from the Smart Life app. Long press and click Delete. Reconfigure the air purifier with the Smart Life app.


NOTE:

Power outages, internet outages, or changing Wi-Fi routers will cause the air purifier to go offline.

REMOTE CONTROL

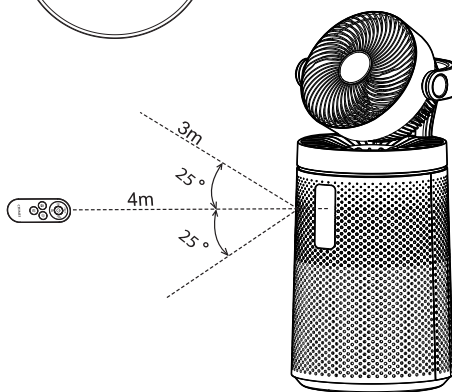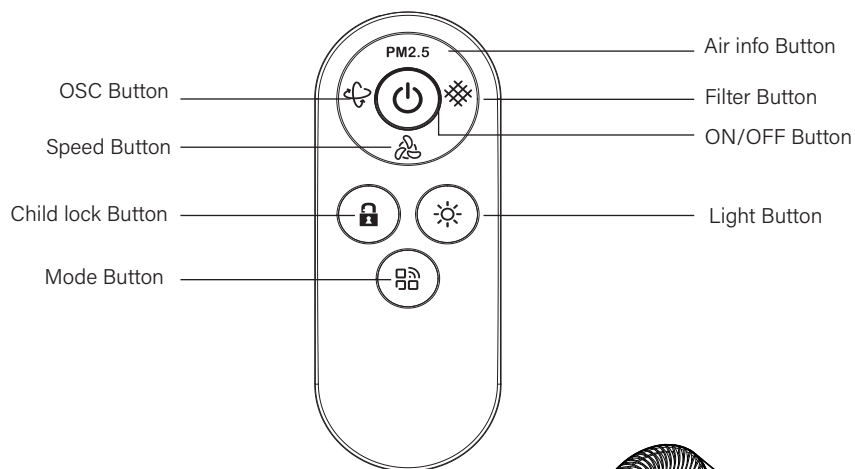


- 1、 The using angle of remote control is 25 degree on left and right. Please use the remote control in 3-4 meters.
- 2、 Be careful to avoid objects blocking the signal transmission of the remote control.

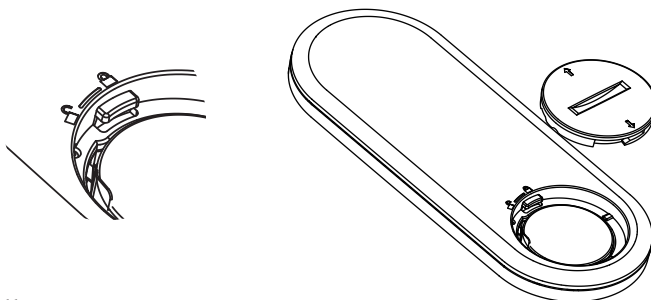

Replace Battery

- 1、 Turn the remote control to remove the battery cover on the back
- 2、 Remove the battery cover on the back.
- 3、 Insert a new battery, use battery model CR-2032.

CONTROL AND DISPLAY

 Speed Button	 Sleep wind speed indicator L Low wind speed indicator H High wind speed indicator T Turbo wind speed indicator (App wake-up only)
 Mode&WIFI Button	 Manual gear: Fan mode indicator  Manual gear: Air purifier indicator  Manual gear: Purifying fan indicator light  Automatic gear: Auto mode indicator ECO Automatic gear: Eco mode indicator  WI-FI indicator (Press for 3s to turn on)
 OSC Button	 Left-right oscillation indicator  Up-down oscillation indicator  3D oscillation indicator
 Light/Anion Function Button	 Atmosphere indicator light  UV purification light  Anion function (Press for 3s to turn on)
 Filter Button	% The remaining life of the filter is displayed If the indicator light starts blinking, it means that the filter needs to be replaced. After replacing the filter, press and hold the button for 3 seconds to reset. HEPA
 Air Info Button	PM10 The quantity of PM10 particles can be queried PM2.5 The quantity of PM2.5 particles can be queried PM1.0 The quantity of PM1.0 particles can be queried
	Air quality display light Air quality can be displayed in real time, and four colors represent four states.

CONTROL AND DISPLAY

NOTE:

1. Install the filter as required, and connect it to the power supply
2. When the product is powered on for the first time, the PM2.5 sensor in the machine will wake up, and the corresponding display light will also turn on synchronously. After the preheating is completed, the prompt sound of "drip" will be heard before the machine can be operated

1. " " ON/OFF Button

- Tap " " to turn on the purifier. The fan will start working in automatic mode, and the 3D shake head function will be enabled. At this point, the sensor begins to identify the surrounding air quality, and the corresponding air quality will be displayed on the screen.
- Tap " " again to turn off the purifier.

2. " " Mode Button

Tap " " to switch between auto mode.ECO mode.fan mode.purifier mode and purifying fan mode.Hold down for 3 seconds to enable wifi pairing.

● About Auto mode

Auto mode uses a smart laser dust sensor to adjust fan speed automatically based on air quality.

For example, if the air quality is bad, the fan will automatically set to a turbo speed. See the figure below for details.

Air Quality Indicator Chat		
Indicator Color	Air Quality	Auto Mode Fan Speed
Blue	Very Good	Sleep Mode
Green	Good	Low
Orange	Moderate	High
Red	Bad	Turbo

NOTE: In auto mode, the purifier starts synchronously with the fan by default, and the wind speed cannot be set.

● About ECO mode

ECO mode is highly energy-efficient compared to auto mode. In ECO mode, if the sensor detects continuous good air quality for 30 minutes, the machine will enter standby mode and stop operating. When the sensor detects poor air quality in standby mode, the machine will resume operation.

● About fan mode

In fan mode, only the fan function is enabled. In this case, you can adjust the wind speed by pressing the wind speed button.

● About purifier mode

In purification mode, the product activates the purification function only, allowing you to adjust the wind speed based on the actual conditions by pressing the speed button.

CONTROL AND DISPLAY

NOTE:

In purification mode, for optimal purification efficiency, the fan will automatically return to a parallel position, and the oscillation function cannot be operated at this time.

● About purifying fan mode

In the purifying fan mode, the fan function is enabled, and the wind speed can be adjusted by pressing the wind speed button according to the actual situation

● About Wi-Fi pairing

long press the "⌂" button for 3 seconds, Wi-Fi indicator will start flashing, the product will enter the network distribution mode, open the APP at the same time, click Add device to start pairing (please check the following APP Setup for pairing steps)

NOTE:

Indicator lights flashing:pairing is underway

Indicator Steady on:The pairing is successful

Indicator off:Pairing fails

TIPS:

1. During the setup process, you must be on a secure 2.4GHz Wi-Fi network. Confirm that the network is working correctly.(Please do not use the 5G network, otherwise, the pairing cannot be successful.)
2. Please complete the pairing within 3 minutes. If the network distribution fails within 3 minutes, the Wi-Fi indicator light will go out, and then stop the network distribution. Long press the timing button for 3 seconds to restart the network distribution mode.
3. Turn off the wifi function, Long press the timing button for 3 seconds to restart the network pairing mode. In pairing mode, when the machine restarts after a power outage, Wi-Fi pairing mode is disabled.

3. "⌂" Speed Button

Choose the wind speed button, you can freely switch between sleep gear, L gear, H gear; Choose the right wind speed

NOTE:

The wind speed button can be adjusted only in manual mode, which includes purifying mode, fan mode, and purifying fan mode

TIPS:

1. If you need to enable super turbo wind speed, you can do so on the app.
2. In sleep mode, the screen slackens for a better experience.

4. "⌂" Osc Button


Tap the "⌂" button to select 3D all-round shake, or open the left and right shake, or up and down shake.

NOTE:

In the purification mode, the state with the optimal purification efficiency is considered, so the shake head function cannot be enabled

TIPS:

If you need to set the shaking Angle, you can set it in the app.

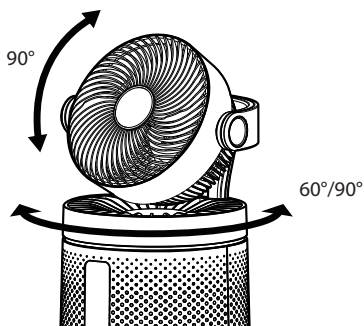

CONTROL AND DISPLAY

"This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair."

5. " " Light/Lock Button

Tap the "  " button, you can open the night atmosphere lamp, at the same time long press 3 seconds can open the Anion Function.

TIPS:

If you need to adjust the brightness of the atmosphere lamp and change it, you can go to the Settings in the APP.

6. " " Filter Button

1. Tap the "  " button to query the remaining life of the filter. If the service life is too low, the HEPA indicator lights on, indicating that the filter needs to be replaced.

TIPS:

Strainers can be purchased at the official AROEVE flagship store

2. After replacing the filter screen, long press the "  " button for 3 seconds, the reset is successful, the HEPA indicator stops blinking, and 5 seconds later it goes out and returns to the main page.

7. " " Air Info Button

Tap the "  " button, you can query the value of particulate matter under different diameters (PM10, PM2.5, PM1.0);

TIPS:

Generally, the lower the value, the better the air quality.

8. Memory function

Built-in memory function, normal shutdown can remember the mode, wind speed, shaking head, lamp;

NOTE: that the child lock and timing function does not carry on memory.

9. Timing function

This function can be set on the APP.

10. Shutdown correction

The product has the function of automatic correction when the machine is shut down.

When the machine is shut down, the shaking head will continue to work, and a countdown will appear on the display screen. When the countdown is over, the machine will return to the original parallel state


HOW TO USE AROMATHERAPY FUNCTION

● How To Use

1. Push to open
2. Add a few drops of the essential oils and close the chamber.

Notes:



1. Shut off the machine before adding the essential oils.
2. Only use the droppers come with the essential oils, do not pour in directly.
3. Add 4-5 drops each time.

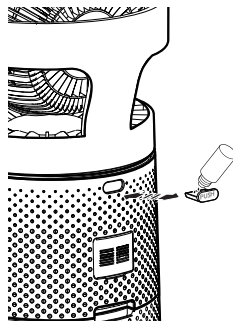

CLEANING OF COMPLETE MACHINE

Make sure that the machine is in the state of power off before cleaning

1. it is recommended to use a vacuum cleaner to remove the dust on the surface
2. Use a clean and semi-humid soft cloth to wipe the stained part of the fuselage clean
Do not use any chemicals or corrosive agents to wipe

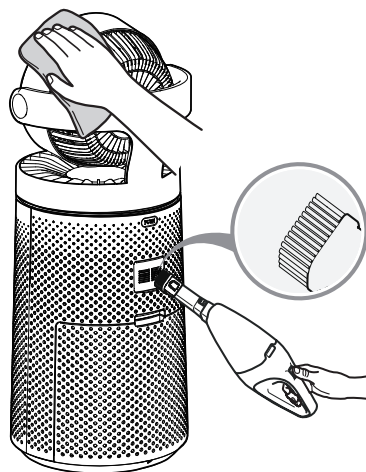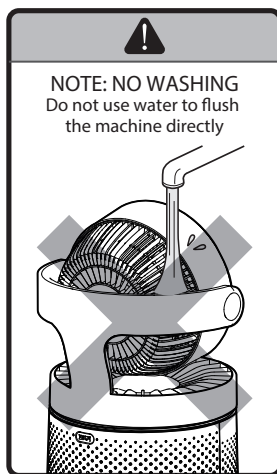

REMOVAL AND CLEANING OF CIRCULATING FAN

Please note: For your safety, make sure that the machine can be disassembled and cleaned only when the power is off

1. Aim the Phillips screwdriver at the position of the screw to remove it. If the screw is lost carelessly, there are 3 replacement screws in the packing box for use.
2. Hold the raised parts at both ends of the grille, rotate clockwise to remove the grille, and the grille part can be washed
3. Turn the nut at the front end of the fan blade clockwise to remove the fan blade for washing


Please note: Only three parts, namely grille, nut and fan blade, can be cleaned. After cleaning, they should be dried and assembled according to the following steps

1. Put the fan blade back into the motor shaft and fasten the nut counterclockwise
2. Find the lock icon above the air outlet grille, align it with the convex point on the machine, and fix it in accordance with the direction of the lock
3. Align the screw with the bottom and tighten it counterclockwise.

Ensure that the fan is switched off from the supply mains before removing the guard.

Warn the user to unplug or disconnect the appliance from the power supply before servicing

REMOVAL AND CLEANING OF CIRCULATING FAN

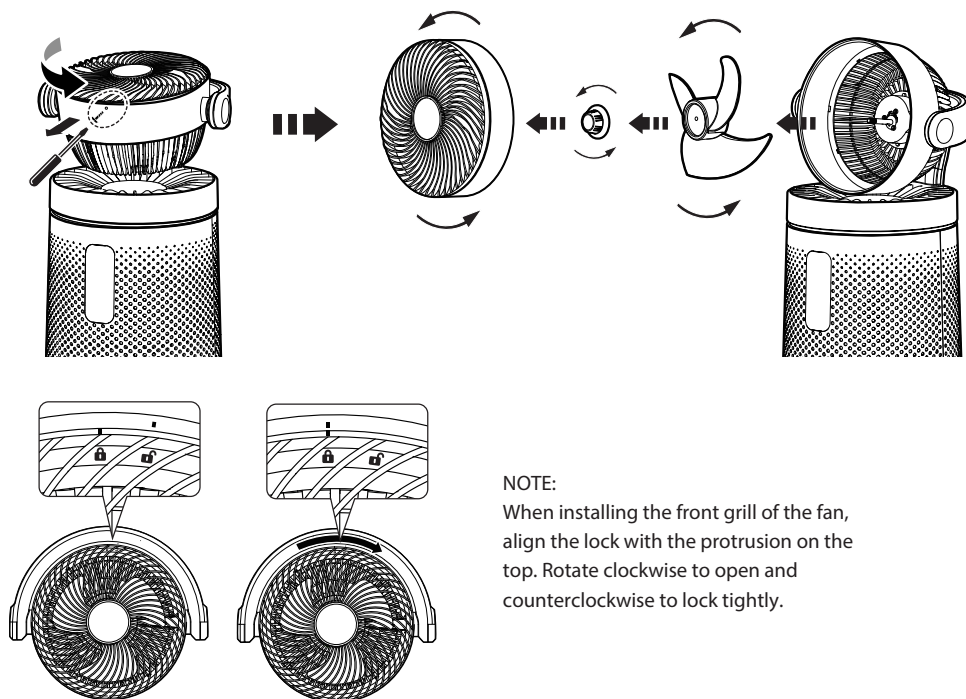

NOTE:

When installing the front grill of the fan, align the lock with the protrusion on the top. Rotate clockwise to open and counterclockwise to lock tightly.

DISASSEMBLY AND CLEANING OF SCREEN

To ensure that the filter can be used for a long time, follow the following steps to clean and maintain the filter:

It is recommended to check the state of the washable filter screen every half a month. If it is found that there is much filter dust, it is recommended to clean it. The cleaning method is as follows:

1. Take out the strainer component and check the state of the outermost washing strainer
2. Tear the strainer along the Velcro interface
3. Wash, clean, and dry


Please note: After drying, it can continue to use. Please according to the installation instructions mentioned before assembly.

TIP: After repeated use of the wash screen 3 times, it is recommended to replace the wash screen with a new one.

About the HEPA filter

The service life of the HEPA filter is 3000h.

DISASSEMBLY AND CLEANING OF SCREEN

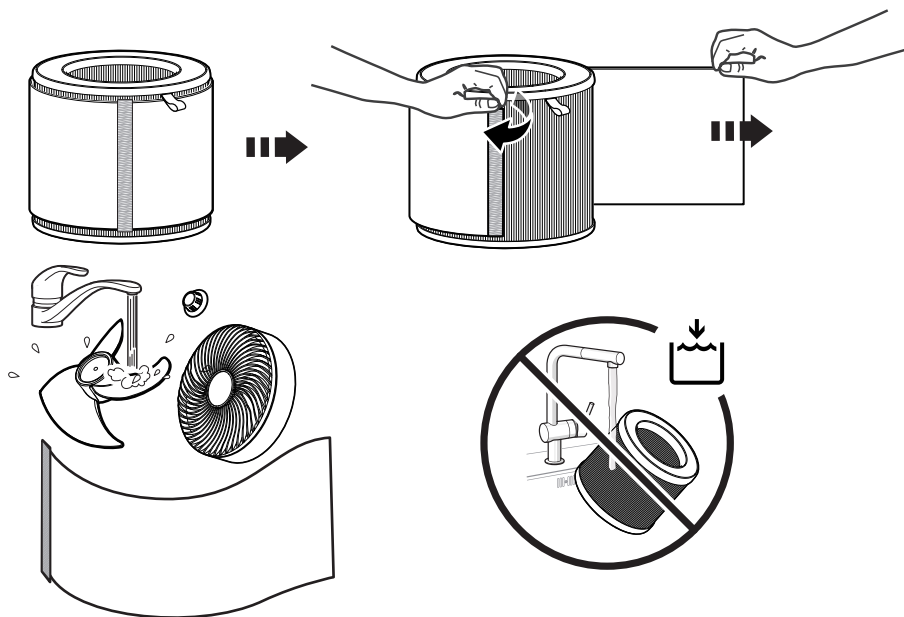

TROUBLESHOOTING

Problem	Possible Solution
The air purifier makes an unusual noise and the outlet air is less.	Make sure the filter is properly in place with plastic packaging removed.
	Make sure the air purifier is operating on a hard, flat, even surface.
	Replace the filter.
	The air purifier may be damaged, or a foreign object may be inside. Stop using the air purifier and contact Customer Support . Do not try to repair the air purifier
Strange smell coming from the purifier.	Replace the filter element
	Make sure not to use your purifier in an area with high humidity or while diffusing essential oils.
	Contact Customer Support.

TROUBLESHOOTING

Problem	Possible Solution
Filter uses less than 3000 hours the environment light has been on red prompt to replace the filter.	Tip 1: The service life of the filter depends on the environment, if the environment is heavily polluted or dusty, the filter is easy to accumulate dust and becomes dirty. (Note: the environment with greater ventilation is more likely to accumulate dust) Tip 2: Humid weather air will be a little more small molecules, more easily combined with dust to form pm 2.5 particles, the sensor senses pm2.5 particles after the red light will be on. Measures 1: It may be necessary to replace the filter. Check whether the filter has been very dirty and needs to be replaced. Measures 2: The room humidity of 75% or more or opening the window on a rainy day, will continue for 1~2 days with red light until the ambient humidity drops to below 75%.

If your problem is not listed , please contact Customer Support.

WARRANTY

We appreciate your feedback and will do our best to guarantee your satisfaction

Within 2 years after your purchase, shall the product have defects, we will provide a refund or resend you a new one.

Please email us with your concern and order number. Your inquiries will be taken care of as soon as possible.

This warranty only cover orders from authorized brand online stores and our official website. We are not responsible for any purchases from other distribution channels



SMART PURIFYING FAN



المشكلة	الحل الممكن
يعمل الفلتر أقل من ٣٠٠٠ ساعة ويضيء ضوء البيئة باللون الأحمر	نصيحة ١: تعتمد عمر خدمة الفلتر على البيئة المحيطة. إذا كان الهواء ملوثًا أو مغبرًا، فسوف يتسخ الفلتر بسهولة. (ملاحظة: الأماكن ذات التهوية العالية أكثر عرضة لتراكم الغبار). نصيحة ٢: في الأجواء الرطبة، قد تتسبب الرطوبة العالية في تكوّن جسيمات $PM_{2.5}$، وعند اكتشاف الحساس لهذه الجسيمات، سيضيء الضوء الأحمر. إجراء ١: قد يكون من الضروري استبدال الفلتر. تحقق مما إذا كان متسخًا جدًا ويحتاج إلى الاستبدال. إجراء ٢: إذا كانت الرطوبة أعلى من ٧٥٪ أو كان النافذة مفتوحة في يوم ممطر، فقد يظل الضوء الأحمر مضيئًا لمدة ١-٢ يومًا حتى تنخفض الرطوبة المحيطة إلى أقل من ٧٥٪.

الضمان

- قدر ملاحظاتكم وسنبذل قصارى جهدنا لضمان رضاكم عن المنتج.
- يتمتع المنتج بضمان لمدة سنتين من تاريخ الشراء، وإذا وُجدت أي عيوب في المنتج، يمكننا استبداله أو استرداد قيمته.
 - للتواصل: يُرجى إرسال بريد إلكتروني إلينا مع ذكر تفاصيل المشكلة ورقم الطلب، وسيتم التعامل مع استفسارك في أقرب وقت ممكن.
 - يغطي الضمان فقط الطلبات من المتاجر الرسمية المعتمدة والموقع الرسمي. نحن غير مسؤولين عن أي مشتريات من قنوات توزيع غير معتمدة.




GRIMMEN

SMART PURIFYING FAN




إزالة وتنظيف مروحة التهوية الدائرية

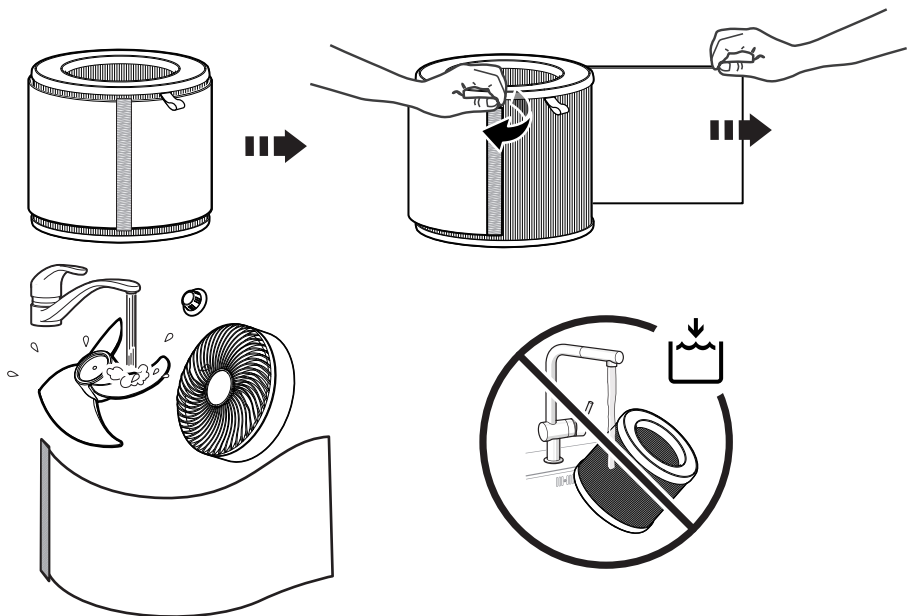

استكشاف الأخطاء وإصلاحها

المشكلة	الحل الممكن
يصدر جهاز تنقية الهواء صوتًا غير عادي أو يقل تدفق الهواء الخارج	تأكد من تثبيت الفلتر بشكل صحيح بعد إزالة الغلاف البلاستيكي.
	تأكد من وضع الجهاز على سطح صلب ومستقر. - قم باستبدال الفلتر
	قد يكون الجهاز معطلاً أو يوجد جسم غريب داخله.
	توقف عن استخدام الجهاز واتصل بخدمة العملاء. لا تحاول إصلاح الجهاز بنفسك.
رائحة غريبة صادرة من جهاز التنقية	استبدل الفلتر
	تأكد من عدم تشغيل الجهاز في بيئة ذات رطوبة عالية أو أثناء استخدام الزيوت العطرية.
	اتصل بخدمة العملاء إذا استمرت المشكلة.

إزالة وتنظيف مروحة التهوية الدائرية

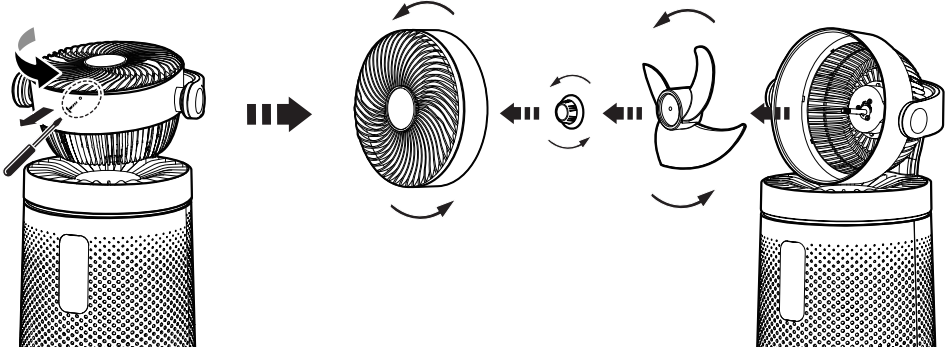

استخدم مفك براغي Phillips لفك المسمار وإزالته. في حال فقدان

المسمار، يوجد ٣ براغي احتياطية في عبوة الجهاز.

٢. أمسك الحواف البارزة للشبكة المعدنية الدائرية وادرها في اتجاه عقارب الساعة لإزالتها وتنظيفها.


٣. قم بفك الصامولة الأمامية للمروحة الدوارة بعكس اتجاه عقارب الساعة، ثم أزل شفرة المروحة للتنظيف.

٤. بعد التنظيف، أعد تركيب الأجزاء بالترتيب التالي:

- ضع شفرة المروحة في عمود المحرك وثبت الصامولة بإحكام عكس اتجاه عقارب الساعة.

- قم بمحاذاة رمز القفل على شبكة التهوية مع البروز الموجود أعلى الجهاز، ثم أدره في عكس اتجاه عقارب الساعة لثبتيته بإحكام.

- ضع المسمار في أسفل الجهاز وقم بثبتيته بإحكام بعكس اتجاه عقارب الساعة.

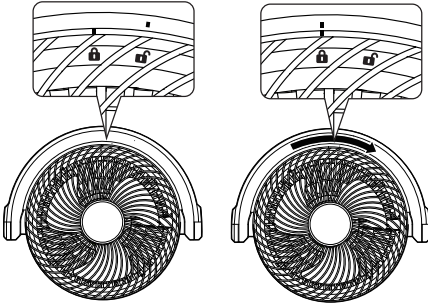

تفكيك وتنظيف الفلتر

لضمان بقاء الفلتر في حالة جيدة لفترة طويلة، اتبع الخطوات التالية لتنظيفه وصيانته بشكل دوري:

١. أخرج عنصر الفلتر وتحقق من حالة الغشاء الخارجي للفلتر القابل للغسيل.

٢. انزع الغشاء الخارجي برفق على طول واجهة الفيلكرو.

٣. اغسل الفلتر، ونظفه جيداً، ثم اتركه يجف تماماً قبل إعادة تركيبه.

ملاحظة:

- يُوصى بفحص حالة الفلتر القابل للغسيل كل نصف شهر، وإذا كان متسخاً بشدة، يفضل تنظيفه على الفور.


- يمكن إعادة استخدام الفلتر بعد تجفيفه تماماً.

- بعد غسل الفلتر لعدة مرات (٣ مرات تقريباً)، يُفضل استبداله بأخر جديد.

حول فلتر HEPA:

- عمر الفلتر HEPA الافتراضي هو ٣٠٠٠ ساعة.

كيفية استخدام وظيفة العلاج بالروائح

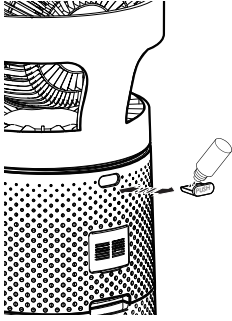

كيفية الاستخدام:

١. اضغط لفتح الغطاء.
٢. أضف بضع قطرات من الزيت العطري وأغلق الغرفة.



ملاحظات:

- تأكد من إيقاف تشغيل الجهاز قبل إضافة الزيوت العطرية.
- استخدم فقط القطارة المرفقة مع الزيوت العطرية، لا تصب الزيوت مباشرة.
- أضف ٤-٥ قطرات فقط في كل مرة.

تنظيف الجهاز بالكامل

تعليمات التنظيف:

١. تأكد من أن الجهاز مغلق تماماً قبل بدء عملية التنظيف.
٢. يُفضل استخدام مكنسة كهربائية لإزالة الغبار عن السطح.
٣. استخدم قطعة قماش ناعمة مبللة قليلاً لمسح الأجزاء المتسخة من جسم الجهاز.
- تحذير: لا تستخدم الماء مباشرة لغسل الجهاز.
- تجنب استخدام المواد الكيميائية أو المواد المسببة للتآكل عند التنظيف.

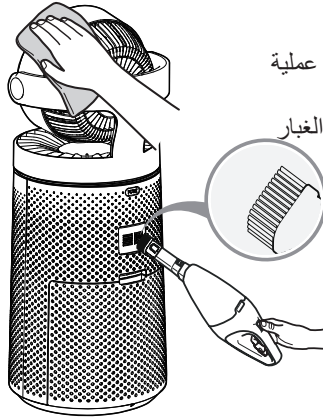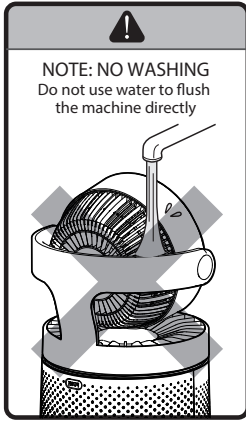

إزالة وتنظيف مروحة التهوية الدائرية

تحذير:

لضمان سلامتك، يجب التأكد من أن الجهاز مطفي تماماً قبل تفكيكه أو تنظيفه.

خطوات الإزالة والتنظيف:

١. استخدم مفك فيليبس لإزالة البرغي في موضعه بعناية.
- في حالة فقدان البرغي، هناك ٣ براغي احتياطية مرفقة في علبة الجهاز.
٢. امسك بالأجزاء المرتفعة في نهايات الشبكة المعدنية وقم بفكها بحذر لإزالتها.
٣. قم بفك الصامولة لتفكيك شفرة المروحة وإزالتها.
٤. يمكن تنظيف ثلاثة أجزاء فقط:
- الشبكة المعدنية (Grille)
- الصامولة (Nut)
- شفرة المروحة (Fan Blade)
- بعد التنظيف، أعد شفرة المروحة إلى عمود المحرك وثّبت الصامولة بإحكام عكس اتجاه عقارب الساعة.
٥. قم بمحاذاة رمز القفل على الشبكة المعدنية مع النقطة البارزة على الجهاز، ثم قم بتركيبها وفقاً لاتجاه القفل.
٦. ضع البرغي في الجزء السفلي وقم بتنصيبه بإحكام بعكس اتجاه عقارب الساعة.

تحذيرات مهمة:

- تأكد من إيقاف تشغيل الجهاز تماماً قبل إزالة الشبكة أو تنظيف المروحة.
- يجب على المستخدم فصل قابس الجهاز من مصدر الطاقة قبل بدء التنظيف أو الصيانة.

٥. زر الإضاءة / القفل (Light/Lock Button)
- اضغط على زر الإضاءة (☀️) لتشغيل أو إطفاء مصباح الإضاءة الليلية.
 - اضغط مع الاستمرار لمدة ٣ ثوانٍ لتفعيل وظيفة الأيونات السالبة (Anion Function).

نصائح:

إذا كنت بحاجة إلى ضبط سطوع الإضاءة الليلية، يمكنك ذلك من خلال إعدادات التطبيق.

٦. زر الفلتر (Filter Button)

• للتحقق من عمر الفلتر المتبقي:

١. اضغط على زر الفلتر (⊗) لعرض العمر المتبقي للفلتر على الشاشة.
٢. إذا كان العمر منخفضًا جدًا، سيضيء مؤشر HEPA، مما يعني أن الفلتر يحتاج إلى استبدال.
- بعد استبدال الفلتر:
١. اضغط مع الاستمرار على زر الفلتر لمدة ٣ ثوانٍ.
٢. عند نجاح إعادة الضبط، سيتوقف مؤشر HEPA عن الوميض وبعد ٥ ثوانٍ سيعود الجهاز إلى الشاشة الرئيسية.

نصائح:

يمكنك شراء الفلاتر البديلة من متجر AROEVE الرسمي.

٧. زر معلومات الهواء (Air Info Button) (PM_{2.5})

- اضغط على زر معلومات الهواء (PM_{2.5}) للاستعلام عن نسبة المواد الجسيمية في الهواء بناءً على أقطار مختلفة (PM₁₀, PM_{2.5}, PM₁).

نصائح:

• كلما انخفضت القيم المعروضة، تحسنت جودة الهواء.

٨. وظيفة الذاكرة (Memory Function)

- يحفظ الجهاز آخر الإعدادات عند إيقاف التشغيل، بما في ذلك الوضع، سرعة المروحة، زاوية التذبذب، وإعدادات الإضاءة.

ملاحظة: لا يتم حفظ إعدادات قفل الطفل (Child Lock) أو إعدادات المؤقت (Timer Function) عند إعادة التشغيل.

٩. وظيفة التوقيت (Timing Function)

- يمكن ضبط المؤقت (Timer Function) من خلال التطبيق.

١٠. تصحيح الإيقاف التلقائي (Shutdown Correction)

- عند إيقاف تشغيل الجهاز، يتم تفعيل التصحيح التلقائي.
- خلال الإيقاف، تظل وظيفة التذبذب نشطة لفترة قصيرة، وسيظهر عداد تنازلي على الشاشة.
- بعد انتهاء العداد التنازلي، ستعود المروحة إلى وضعها الموازي الأصلي تلقائيًا.

١. وضع تنقية المروحة (Purifying Fan Mode)

في هذا الوضع، تعمل المروحة جنباً إلى جنب مع وظيفة التنقية. يمكنك ضبط سرعة الرياح باستخدام زر التحكم في السرعة بناءً على الظروف الفعلية.

ملاحظة: أثناء تشغيل وضع التنقية، تعود المروحة تلقائياً إلى وضع موازٍ لتحسين كفاءة التنقية، ولا يمكن استخدام وظيفة التذبذب في هذا الوقت.

٢. اقتران Wi-Fi (Wi-Fi Pairing)

لتمكين الاقتران بشبكة Wi-Fi:

١. اضغط مع الاستمرار على زر الوضع (⏻) لمدة ٣ ثوانٍ.
- ستبدأ إضاءة مؤشر Wi-Fi في الوميض، وسيدخل الجهاز في وضع توزيع الشبكة.
٢. افتح تطبيق الجهاز على هاتفك الذكي واضغط على "إضافة جهاز" لبدء عملية الاقتران.
٣. انتظر حتى يكتمل الاقتران وفقاً للخطوات الموضحة في التطبيق.

ملاحظات هامة:

- إذا كان المؤشر يومض: هذا يعني أن الجهاز في وضع الاقتران.
- إذا كان المؤشر ثابتاً: فهذا يعني أن الاقتران ناجح.
- إذا كان المؤشر مطفأ: فشل الاقتران.

نصائح:

١. أثناء عملية الإعداد، تأكد من أنك متصل بشبكة Wi-Fi بتردد ٢,٤ جيجاهرتز، لأن الشبكة ٥ جيجاهرتز غير مدعومة للاقتران.
٢. يجب إتمام عملية الاقتران خلال ٣ دقائق، وإلا فستفشل وسيطفى المؤشر. لإعادة المحاولة، اضغط مع الاستمرار على زر التوقيت لمدة ٣ ثوانٍ لإعادة تفعيل وضع توزيع الشبكة.
٣. إذا كنت ترغب في إيقاف تشغيل Wi-Fi، اضغط مع الاستمرار على زر التوقيت لمدة ٣ ثوانٍ لإعادة تشغيل وضع الاقتران. بعد انقطاع التيار الكهربائي، يتم تعطيل وضع اقتران Wi-Fi تلقائياً.

٢. زر التحكم في سرعة الرياح (Speed Button) (⏻)

الخيارات المتاحة للتحكم في سرعة المروحة:

- وضع النوم (Sleep Mode)
- السرعة المنخفضة (Low Gear - L)
- السرعة العالية (High Gear - H)
- السرعة القصوى (Turbo - T) (يمكن ضبطها من خلال التطبيق فقط)

ملاحظات:

• يمكن تغيير سرعة المروحة فقط في الوضع اليدوي، مثل وضع التنقية، وضع المروحة، أو وضع تنقية المروحة.


• نصائح:

١. لتمكين سرعة التوربو الفائقة (Super Turbo Speed)، قم بتفعيلها من خلال التطبيق.
٢. في وضع النوم (Sleep Mode)، تعمل الشاشة بشكل خافت لراحة أفضل أثناء النوم.

٤. زر التآرج (Osc Button) (⏻)

يمكنك الضغط على زر التآرج (⏻) لاختيار وضع التآرج المناسب:

- تآرج ثلاثي الأبعاد (3D All-Round Mode).
- تآرج أفقي (٩٠° - ٦٠°).
- تآرج لأعلى وأسفل.

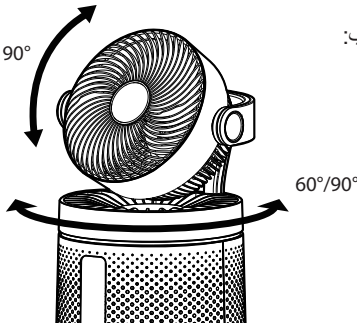

ملاحظة: عند تشغيل وضع التنقية، يتم ضبط الجهاز تلقائياً للحفاظ على أقصى كفاءة للتنقية، ولذلك لا يمكن تفعيل وظيفة التآرج أثناء التنقية.

١. زر التشغيل/الإيقاف (ON/OFF Button)

اضغط على زر التشغيل/الإيقاف () لتشغيل جهاز التنقية. ستبدأ المروحة في العمل في الوضع التلقائي، وسيتم تفعيل وظيفة التارج ثلاثي الأبعاد (3D shake head function). عند تشغيل الجهاز، يقوم المستشعر بالتعرف على جودة الهواء المحيطة وعرضها على الشاشة. اضغط على زر التشغيل/الإيقاف مرة أخرى لإيقاف تشغيل جهاز التنقية.

٢. زر الوضع (Mode Button)

اضغط على زر الوضع () للتبديل بين أوضاع التشغيل التالية:

وضع التلقائي (Auto Mode)

وضع توفير الطاقة (ECO Mode)

وضع المروحة (Fan Mode)

وضع التنقية (Purifier Mode)

وضع تنقية المروحة (Purifying Fan Mode)

اضغط مطوًلاً لمدة ٣ ثوانٍ لتفعيل الاقتران بشبكة الواي فاي.

معلومات عن أوضاع التشغيل المختلفة:

١. الوضع التلقائي (Auto Mode)

يستخدم مستشعر الغبار بالليزر الذكي لتحديد جودة الهواء وتعديل سرعة المروحة تلقائياً وفقاً لذلك.

على سبيل المثال، إذا كانت جودة الهواء سيئة، فستعمل المروحة تلقائياً على السرعة القصوى (Turbo speed).

جدول مؤشر جودة الهواء:

لون المؤشر	جودة الهواء	سرعة منخفضة (Low)
أزرق	جيدة جداً	وضع النوم (Sleep Mode)
أخضر	جيدة	سرعة منخفضة (Low)
برتقالي	متوسطة	سرعة عالية (High)
أحمر	سيئة	سرعة تربو (Turbo)

ملاحظة: في وضع التشغيل التلقائي، يعمل جهاز التنقية مع المروحة بشكل متزامن افتراضياً، ولا يمكن ضبط سرعة الرياح يدوياً.

٢. وضع توفير الطاقة (ECO Mode)

• يتميز بأنه أكثر كفاءة في استهلاك الطاقة مقارنة بالوضع التلقائي.

• إذا استشعر الجهاز جودة هواء جيدة بشكل مستمر لمدة ٣٠ دقيقة، سيتوقف عن العمل تلقائياً.

• إذا استشعر تدهور جودة الهواء أثناء التوقف، سيعمل الجهاز مجدداً تلقائياً.

٣. وضع المروحة (Fan Mode)

• يسمح لك هذا الوضع بتشغيل المروحة فقط، بدون تنقية الهواء.



• يمكنك التحكم في سرعة المروحة يدوياً من خلال زر التحكم في السرعة.

٤. وضع التنقية (Purifier Mode)

• في هذا الوضع، يتم تنشيط وظيفة تنقية الهواء فقط.


• يمكن ضبط سرعة المروحة يدوياً باستخدام زر التحكم في السرعة.

شُر سرعة الرياح في وضع النوم مؤشر سرعة الرياح المنخفضة مؤشر سرعة الرياح العالية مؤشر سرعة الرياح التوربينية (متاح فقط عبر التطبيق)	🌀 L H T	 Speed Button
وضع يدوي: مؤشر المروحة العادي وضع يدوي: مؤشر تنقية الهواء وضع يدوي: مؤشر ضوء المروحة المنقّية وضع تلقائي: مؤشر الوضع التلقائي وضع توفير الطاقة: مؤشر وضع الاقتصاد مؤشر الواي فاي: اضغط لمدة ٣ ثوانٍ لتشغيله	🌀 0 🌀 + 0 🌀 ECO 📶	 Mode&WIFI Button
مؤشر تآرجح المروحة الجانبي (يمين - يسار) مؤشر تآرجح المروحة العمودي (أعلى - أسفل) مؤشر تآرجح ثلاثي الأبعاد (٣D oscillation)	↶ ↷ ↶ + ↷	 OSC Button
مؤشر الإضاءة الجوي إضاءة التطهير بالأشعة فوق البنفسجية (UV Purification Light) وظيفة الأنيون (اضغط لمدة ٣ ثوانٍ للتشغيل)	☀️ 🌊 ⊕	 Light/Anion Function Button
عرض العمر المتبقي للفلتر إذا بدأ مؤشر الفلتر في الوميض، فهذا يعني أن الفلتر بحاجة إلى التغيير. بعد استبداله، اضغط مع الاستمرار على الزر لمدة ٣ ثوانٍ لإعادة ضبطه.	% HEPA	 Filter Button
الموجودة في الهواء يعرض كمية الجسيمات PM_{2.5} يعرض كمية الجسيمات PM_{1.0}	PM10 PM2.5 PM1.0	 Air Info Button
مؤشر جودة الهواء (Air Quality Display Light): يُعرض مستوى جودة الهواء في الوقت الفعلي، حيث تعبر أربعة ألوان عن أربع حالات مختلفة للجودة.		

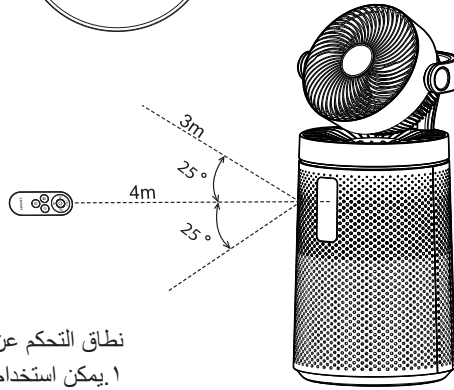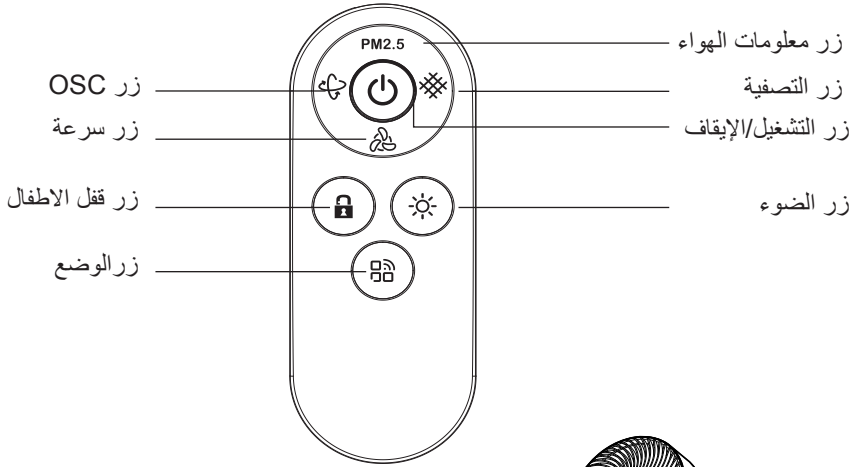

نطاق التحكم عن بعد:

1. يمكن استخدام وحدة التحكم عن بعد بزاوية ٢٥ درجة إلى اليسار واليمين، ومن مسافة ٣-٤ أمتار.
2. تأكد من عدم وجود عوائق تمنع وصول إشارة الريموت إلى جهاز تنقية الهواء لضمان استجابة سريعة.

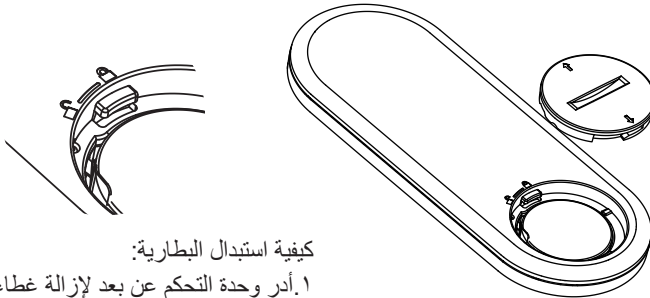

كيفية استبدال البطارية:

1. أدر وحدة التحكم عن بعد لإزالة غطاء البطارية الموجود في الخلف.
2. قم بإزالة البطارية القديمة بحذر.
3. أدخل بطارية جديدة من نوع CR-٢٠٣٢، مع التأكد من وضعها بالطريقة الصحيحة.

واصلة استكشاف الأخطاء وإصلاحها - تطبيق Smart Life

- إذا لم يتمكن جهاز تنقية الهواء من الاتصال بالتطبيق، يمكنك تجربة الحلول التالية:
4. حاول تغيير موقع جهاز تنقية الهواء بالقرب من الراوتر.
 - يُفضل وضع الراوتر في مكان مرتفع بعيداً عن العوائق للحصول على إشارة أفضل.
 5. تأكد من أن الجهاز والراوتر بعيدين عن مصادر التداخل مثل:
 - أفران الميكروويف، الثلاجات، الأجهزة الإلكترونية الأخرى.
 6. إذا كنت تستخدم VPN، قم بإيقاف تشغيله أثناء إعداد الجهاز.
 7. قم بتعطيل ميزة المصادقة عبر البوابة (Portal Authentication) لشبكة Wi-Fi.
 - في حال كانت هذه الميزة مفعلة، فلن يتمكن جهاز تنقية الهواء من الاتصال بالشبكة، وسيفشل الإعداد.

ماذا أفعل إذا كان جهاز تنقية الهواء غير متصل بالإنترنت؟

1. تأكد من أن الجهاز موصول بالكهرباء ويعمل بشكل صحيح، ثم قم بتحديث قائمة الأجهزة في تطبيق Smart Life عن طريق السحب لأسفل على الشاشة.
2. تحقق من أن الراوتر متصل بالإنترنت، وأن هاتفك متصل بالشبكة ويعمل بشكل جيد.
3. إذا ظل الجهاز غير متصل، قم بحذفه من التطبيق عن طريق الضغط عليه مطوئاً، ثم انقر على "حذف" (Delete).
- بعد ذلك، أعد ضبط إعدادات جهاز تنقية الهواء، ثم حاول إعادة ربطه بالتطبيق.

ملاحظة:

- انقطاع الكهرباء أو الإنترنت أو تغيير الراوتر قد يؤدي إلى فقدان الاتصال، مما يستلزم إعادة ضبط وإعادة اقتران الجهاز بالتطبيق.

الخطوة ٦:




عند نجاح لاقتران، سيتم تفعيل الجهاز في التطبيق، ويمكنك التحكم به عن بُعد.

الخطوة ٥:

افتح التطبيق وابحث عن الجهاز، ثم قم بإدخاله في وضع الاقتران وانتظر الاتصال بالشبكة.

الخطوة ٤:

تأكد من أن الجهاز قيد التشغيل، واتبع التعليمات الموضحة. اضغط مع الاستمرار على زر إعادة الضبط (RESET) لمدة ٥ ثوانٍ حتى يبدأ مؤشر Wi-Fi في الوميض ببطء.

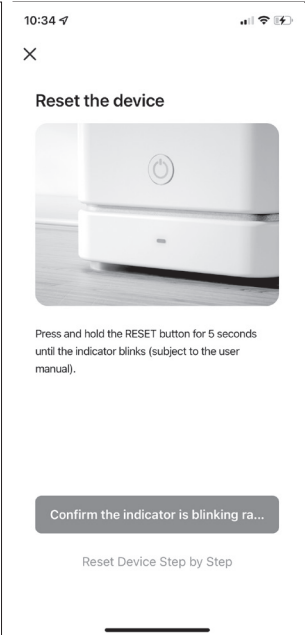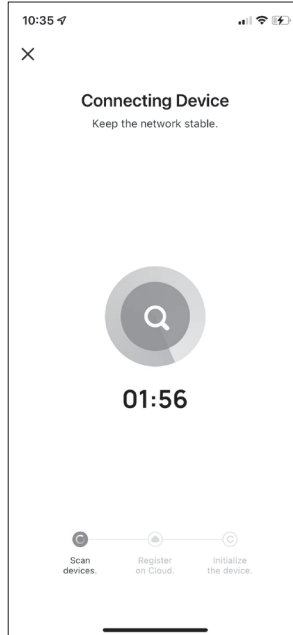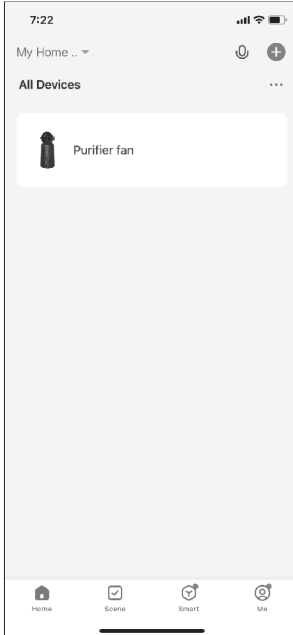

استكشاف الأخطاء وإصلاحها

جهاز لا يتصل بتطبيق Smart Life، ماذا أفعل؟

١. أثناء عملية الإعداد، تأكد من أنك متصل بشبكة Wi-Fi بتردد 2.4 GHz.
٢. لا تستخدم شبكة 5 GHz، لأن الاقتران لن يكون ناجحًا.
٣. تحقق من أن الشبكة تعمل بشكل صحيح.
٤. تأكد من أنك أدخلت كلمة مرور Wi-Fi بشكل صحيح.




نصائح إضافية:

- لا تترك مسافات في بداية أو نهاية كلمة المرور.
- جرب اختبار كلمة المرور عن طريق توصيل جهاز إلكتروني آخر على نفس الشبكة.
- إذا كنت تقوم بإدخال اسم الشبكة (SSID) وكلمة المرور يدويًا، تحقق جيدًا من صحتها.

الخطوة ٣:
إدخال كلمة مرور Wi-Fi

الخطوة ٢:
إضافة الجهاز يدويًا

الخطوة ١:
اضغط على زر "+" لإضافة جهاز

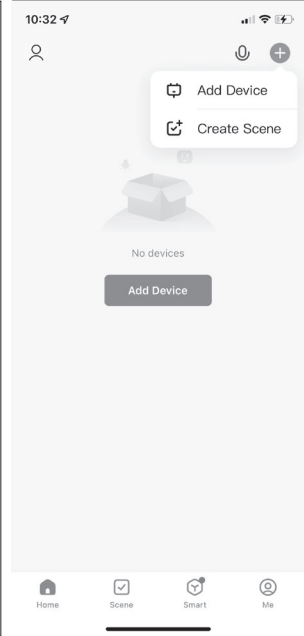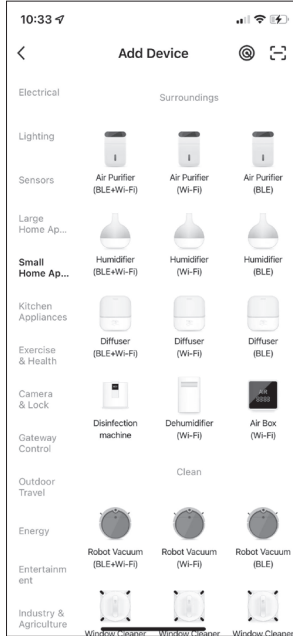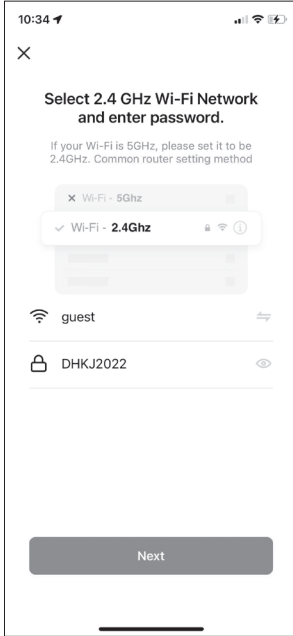

نصائح لإعداد Wi-Fi والاقتران

١. تأكد من أنك متصل بشبكة Wi-Fi بتردد ٢,٤ GHz، حيث لا يدعم الجهاز شبكات ٥ GHz.
٢. قم بإتمام عملية الاقتران في غضون ٣ دقائق. إذا لم يتم الاتصال في هذه المدة، سينطفئ ضوء المؤشر، عليك إعادة الضغط مع الاستمرار على زر Wi-Fi لمدة ٣ ثوانٍ لإعادة المحاولة.
٣. أثناء الاتصال بشبكة Wi-Fi، يمكنك الضغط مع الاستمرار لمدة ٣ ثوانٍ على زر Wi-Fi لإعادة ضبط الاتصال. في هذه الحالة، سيدخل الجهاز في وضع الاقتران مجددًا، وسيتمتع عليك إعداداته من جديد.
٤. في حال انقطاع التيار الكهربائي، سيتم إيقاف وضع الاقتران التلقائي. لإعادة تشغيل وضع الاقتران، اضغط مع الاستمرار على زر Wi-Fi لمدة ٣ ثوانٍ حتى يعود المؤشر للوميض.

١. تحميل تطبيق Smart Life



قم بمسح رمز الـ QR الموجود في الصورة أو ابحث عن Smart Life في متجر Apple أو Google Play لتحميل التطبيق.

٢. تسجيل الدخول أو إنشاء حساب جديد في التطبيق


(Log In)

(Sign Up)

٣. التأكد من اتصال الهاتف بالإنترنت عبر Wi-Fi

- تأكد من أن هاتفك متصل بشبكة Wi-Fi.
- افتح التطبيق وقم بتفعيل خاصية الاقتران عبر Wi-Fi في الجهاز.
- لمزيد من التفاصيل حول إعداد الـ Wi-Fi، راجع الصفحة ٦ في الدليل.
- اتبع الخطوات الموضحة في الدليل لإتمام عملية الاقتران مع الجهاز.

1

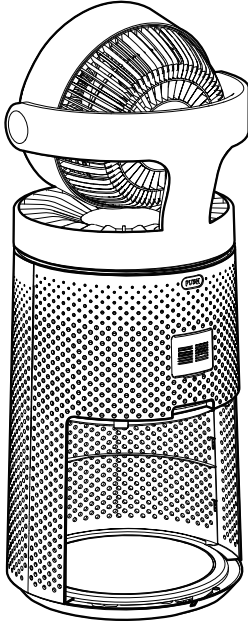

منقي الهواء الخاص بك مع فلتر أصلي مرفق. قبل الاستخدام، تأكد من إزالة التغليف من الفلتر.


خطوات التركيب:

١. ضع منقي الهواء على سطح مستوي وثابت، ثم افتح وأزل شبكة الهواء الموجودة في الجزء الخلفي من الجهاز. (انظر الصورة ١)


٢. قم بفتح كيس الفلتر وأخرج فلتر HEPA. (انظر الصورة ٢)

٣. ابحث عن مصفاة الغسيل بالماء في صندوق التعبئة وقم بتركيبها وفقاً للصورة. (انظر الصورة ٣)


٤. اجمع الفلاتر وأدخلها في الجهاز، ثم أغلق الشبكة لاستخدام المنقي. (انظر الصورة ٤)

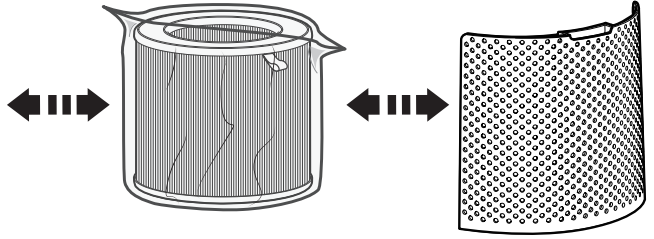



2

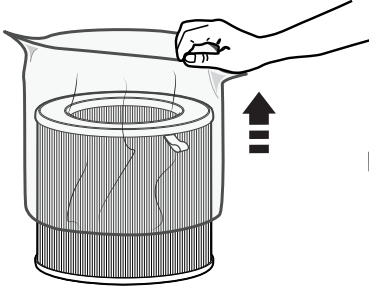

3

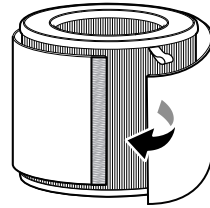


4

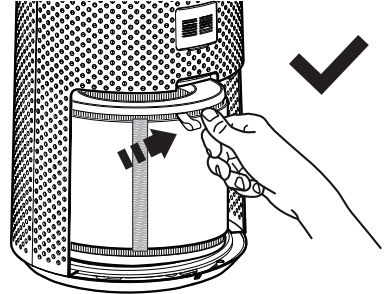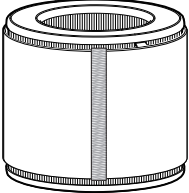

ملاحظة: تأكد من أن فلتر HEPA الأصلي (الجانب الذي يحتوي على شريط اليد) متجهًا للخارج عند تثبيت الفلتر.



التعرف على منقي الهواء

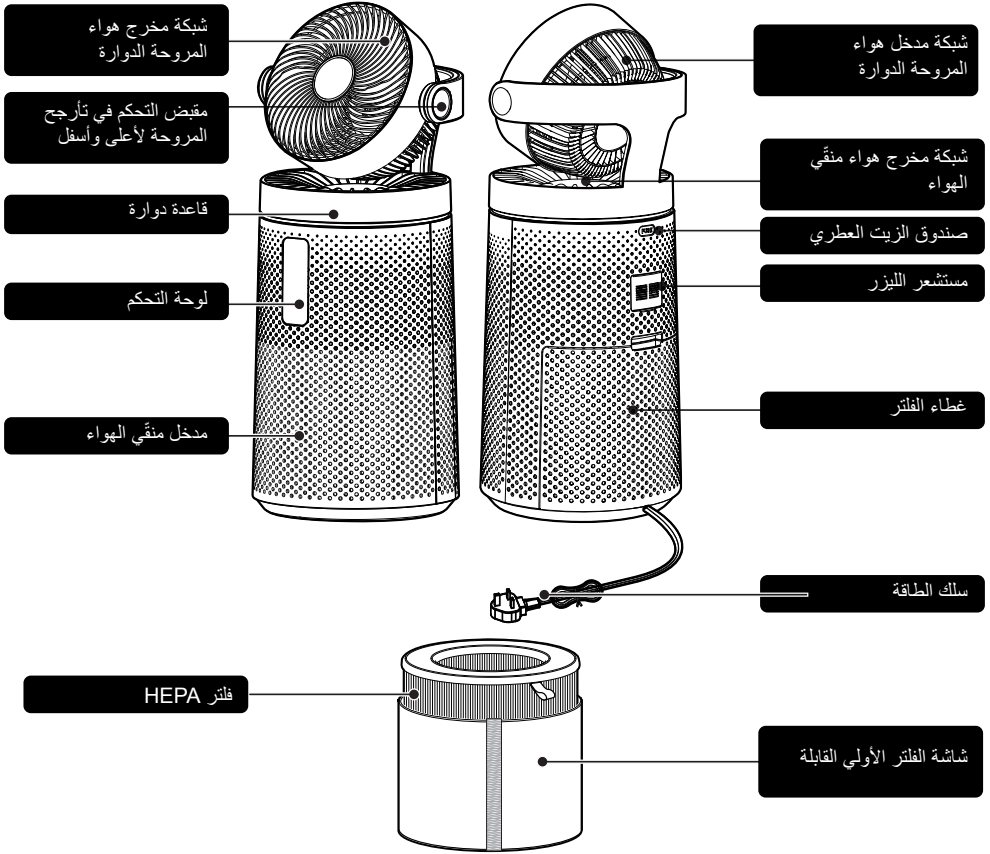

محتويات العبوة



× ١

مروحة تنقية الهواء الذكية




× ١

دليل المستخدم



× ١

جهاز التحكم عن بُعد



× ١

فلاتر زيوت عطرية أصلية (٥ قطع مجانًا)



× ١

فلتر HEPA أصلي (مثبت مسبقًا)



× ١

شاشة الفلتر الأولى القابلة للغسل



× ٣

برغي استبدال لمروحة الدوران

١٩. لا تستخدم المنظفات، البنزين، منظفات الزجاج، ملمع الأثاث، مزيل الطلاء، أو أي مزيلات منزلية أخرى لتنظيف أي جزء من منقي الهواء.
٢٠. لا يجوز للأفراد غير المحترفين أو غير المعتمدين إصلاح الجهاز أو تعديله بأنفسهم.
٢١. لا تشغل الجهاز إذا كان السلك أو القابس تالفاً. إذا فشل محرك المروحة في العمل أو تعرض الجهاز للسقوط أو التلف بأي شكل من الأشكال، فاتصل بخدمة العملاء.
٢٢. اترك مسافة لا تقل عن ١٥ بوصة من جميع الجوانب حول منقي الهواء.
٢٣. هذا المنتج يلتزم بالحد الأقصى المسموح به لتركيز الأوزون وهو ٠,٠٥٠ جزء في المليون خلال فترة ٢٤ ساعة.
٢٤. يحتوي هذا المنتج على حماية من التحميل الزائد (الفيوز). يشير احتراق الفيوز إلى زيادة التحميل أو ماس كهربائي. إذا احترق الفيوز، افصل الجهاز عن الكهرباء، ثم استبدل الفيوز وفقاً لتعليمات الخدمة (تحقق من تصنيف الفيوز المناسب للمنتج). إذا احترق الفيوز البديل أيضاً، فقد يكون هناك ماس كهربائي، ويجب التخلص من الجهاز أو إعادته إلى مركز خدمة معتمد للفحص والإصلاح.
٢٥. لا تستخدم أي مروحة بسلك أو قابس تالف. تخلص من الجهاز أو أعده إلى مركز خدمة معتمد للفحص والإصلاح.
٢٦. لا تمرر السلك تحت السجاد. لا تغطي السلك بالسجاد الصغير، أو المشايات، أو أي أغطية مماثلة. لا تمرر السلك تحت الأثاث أو الأجهزة. قم بترتيب السلك بعيداً عن المناطق التي قد يتسبب فيها بعرقلة المارة.
٢٧. خطر الحريق: لا تستبدل قابس التوصيل. يحتوي القابس على جهاز أمان (فيوز، LCDI، AFCI) يجب عدم إزالته. تخلص من المنتج إذا كان القابس تالفاً.
٢٨. لا ينبغي استخدام الجهاز من قبل الأشخاص (بما في ذلك الأطفال) الذين لديهم قدرات بدنية أو حسية أو عقلية منخفضة، أو يفقدون إلى الخبرة والمعرفة، إلا إذا تم توفير الإشراف أو التعليمات لهم.
- يجب عدم السماح للأطفال باللعب بالجهاز.
- تحذير المستخدم من فصل الجهاز عن مصدر الطاقة قبل الصيانة أو التنظيف.
- للحد من مخاطر الحريق، أو الصدمات الكهربائية، أو إصابة الأشخاص، لا تستخدم قطع غيار غير معتمدة من الشركة المصنعة (مثل الأجزاء المصنعة منزلياً بواسطة طابعة ثلاثية الأبعاد).

تحذير:

أي تغييرات أو تعديلات غير معتمدة على هذا الجهاز قد تؤدي إلى فقدان صلاحية المستخدم في تشغيل الجهاز.

المواصفات

الاسم: مروحة تنقية الهواء الذكية	التردد المقتن: ٦٠-٥٠ هرتز
الجهد المقتن: ٢٢٠-٢٤٠ فولت	الطاقة المقتن: ٥٣ واط
طراز المنتج: GR-AP700	

٢ - ١	تعليمات السلامة
٢	المواصفات
٣	التعرف على منقّي الهواء
٤	البداية
٧ - ٥	إعداد التطبيق
٨ - ٧	استكشاف أخطاء تطبيق سمارت لايف وإصلاحها
٩	التحكم عن بُعد
١٣ - ١٠	التحكم والعرض
١٤	كيفية استخدام وظيفة العلاج العطري
١٤	تنظيف الجهاز بالكامل
١٥ - ١٤	إزالة وتنظيف المروحة الدوارة
١٦ - ١٥	تفكيك وتنظيف الفلتر
١٧ - ١٦	استكشاف الأخطاء وإصلاحها
١٧	الضمان

تعليمات السلامة

مهم:

يرجى قراءة جميع التعليمات والتحذيرات الواردة في هذا الدليل والالتزام بها قبل استخدام المنتج. قد يؤدي عدم الامتثال للتعليمات والتحذيرات المذكورة إلى نتائج غير دقيقة أو تلف في المنتج نفسه.

١. تأكد من أن القابس مناسب تماماً لمأخذ كهربائي مستقطب.
٢. يجب استخدام هذا الجهاز فقط في غرف تتراوح درجة حرارتها بين 5°C و 35°C .
٣. لتجنب مخاطر الحريق أو الصدمات الكهربائية، قم بتوصيل المنقّي بالمقبس الكهربائي الصحيح.
٤. لا تضع الجهاز أبداً على سطح ناعم مثل السرير أو الأريكة، فقد يؤدي ذلك إلى انقلاب الجهاز أو انسداد منافذ دخول وخروج الهواء.
٥. لا تضع أي شيء فوق الجهاز.
٦. لا تحرك الجهاز أو تميله أثناء تشغيله.
٧. لا تُدخّل أصابعك أو أي أجسام أخرى في منافذ دخول وخروج الهواء.
٨. لا تستخدم الجهاز في الهواء الطلق. هذا الجهاز مخصص للاستخدام الداخلي فقط، ويجب تجنب التعرض المباشر لأشعة الشمس القوية والمطر.
٩. لا تستخدم الجهاز بالقرب من الماء لتجنب مخاطر الكهرباء.
١٠. لا تستخدم الجهاز في بيئات رطبة أو مبللة.
١١. لا تلمس الجهاز بيدين مبلتين. تأكد من تجفيف يديك جيداً قبل التعامل مع أي جزء من منقّي الهواء.
١٢. لا تضع الجهاز مباشرة أسفل مكيف الهواء لتجنب وصول أي رطوبة إلى الداخل.
١٣. لا تسمح للأطفال أو الحيوانات الأليفة باللعب بالجهاز أو بالقرب منه. يجب مراقبة الجهاز عند استخدامه بالقرب من الأطفال أو الأشخاص ذوي الاحتياجات الخاصة.
١٤. أبعد الجهاز عن الأسطح الساخنة واللهب المكشوف مثل المواقد، الأفران، المشعات، أو أجهزة الكمبيوتر.
١٥. احرص دائماً على إطفاء الجهاز قبل فصله عن الكهرباء.
١٦. قم بفصل الجهاز قبل تنظيفه أو تحريكه أو فتح الغطاء الخلفي أو تغيير الفلتر أو عند عدم استخدامه.
١٧. لفصل الجهاز عن الكهرباء، تأكد من سحب القابس وليس السلك.
١٨. هذا الجهاز لا يزيل أول أكسيد الكربون أو الرادون. لا يمكن استخدامه كجهاز أمان لمنع أو تنظيف الحوادث الناتجة عن عمليات الاحتراق والمواد الكيميائية الخطرة.



GRIMMEN



www.grimmenhome.com



0 794677 523282